



Fig. 1 (PRIOR ART)

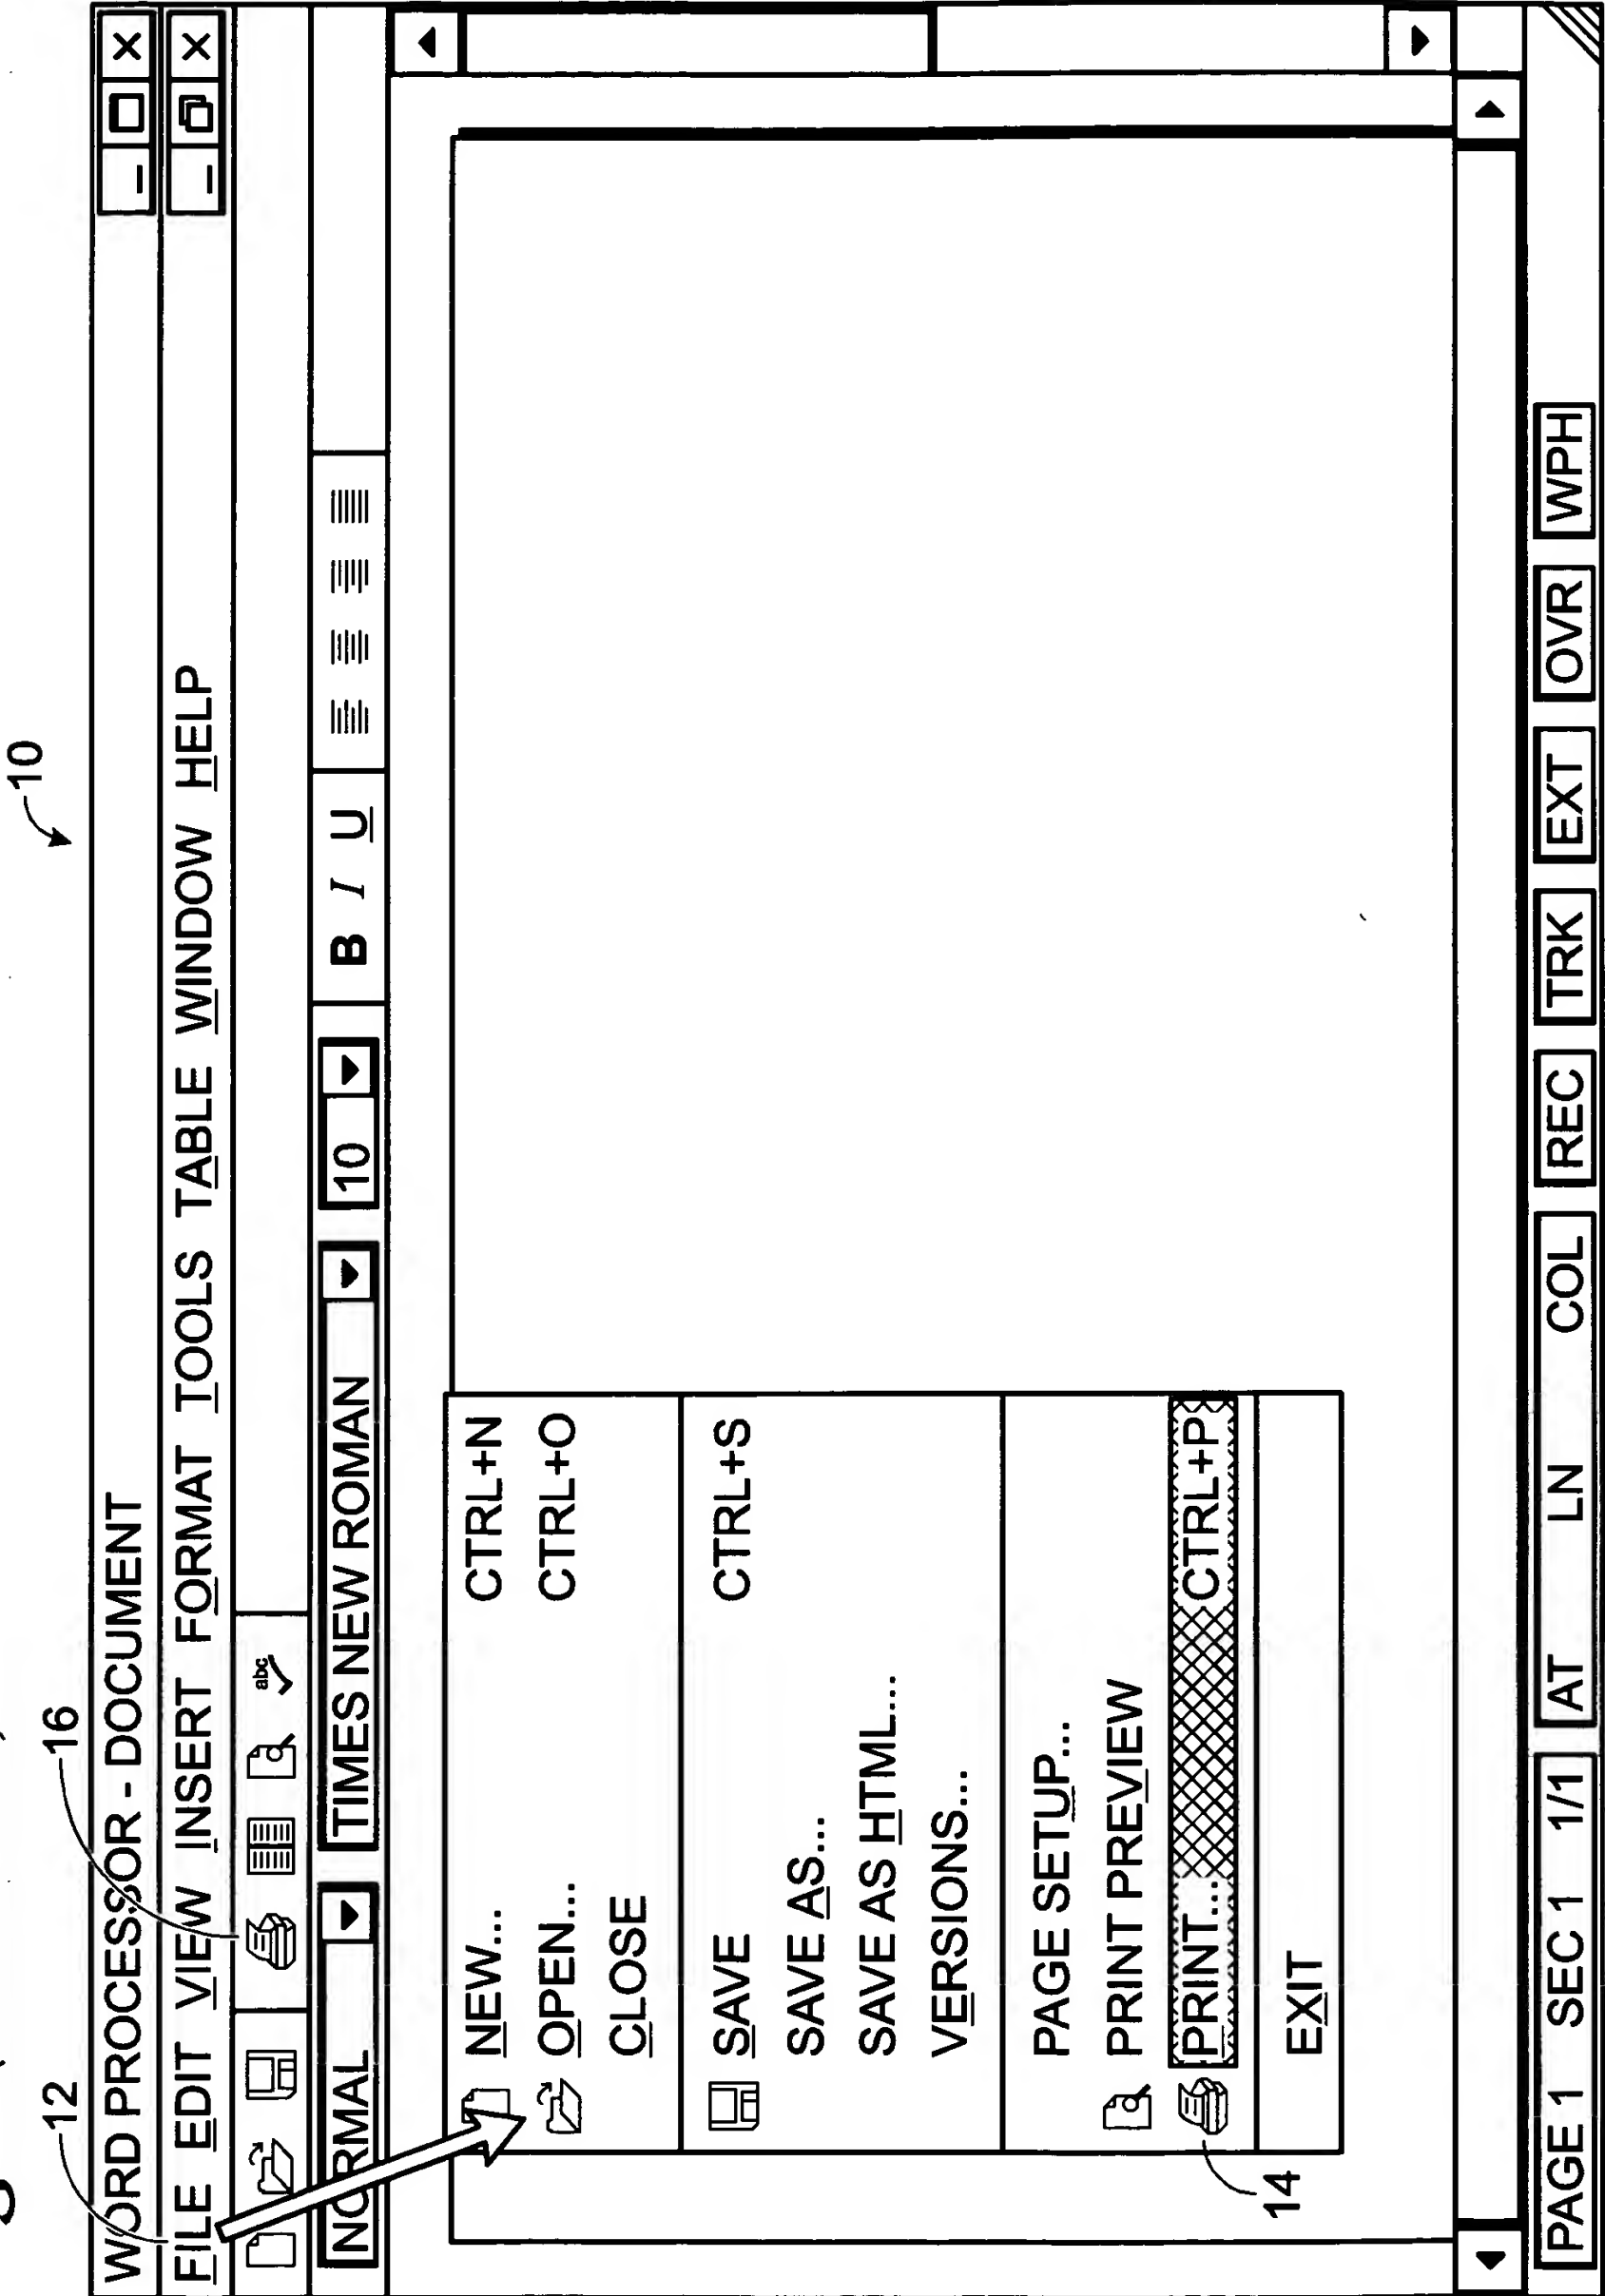


Fig. 2 (PRIOR ART)

PRINT

PRINTER

NAME: LASER PRINTER

STATUS: IDLE

TYPE: LASER PRINTER

WHERE: \\ADMSRVNT01\PRINTER

COMMENT:

PROPERTIES

PRINT TO FILE

PAGE RANGE

☒ ALL

☐ CURRENT PAGE

☐ SELECTION

PAGES:

ENTER PAGE NUMBERS AND/OR PAGE RANGES
SEPARATED BY COMMAS. FOR EXAMPLE, 1,3,5-12

COPIES

NUMBER OF COPIES: 1

1

2

3

1

2

3

☒ COLLATE

PRINT WHAT: DOCUMENT

PRINT: ALL PAGES IN RANGE

OPTIONS...

OK

CANCEL

18

20

Fig. 3 (PRIOR ART)

The dialog box is titled "LASER PRINTER PROPERTIES" and has a standard Windows-style title bar with a question mark and a close button. It features five tabs: "FINISHING", "EFFECTS", "PAPER", "DESTINATION", and "BASICS". The "FINISHING" tab is currently selected. Inside this tab, there are two main sections. The first section, labeled "QUICK SETS", contains a dropdown menu showing "DUPLEX - BOOK" (indicated by a small downward arrow) and a "DELETE" button. The second section, labeled "DOCUMENT OPTIONS", contains several checkboxes: "PRINT ON BOTH SIDES" (checked), "FLIP PAGES UP" (unchecked), "BOOKLET PRINTING:" (with a dropdown menu showing "OFF"), "COLLATE AT PRINTER" (checked), "PAGES PER SHEET" (with a spinner box showing "1"), "PRINT PAGE BORDERS" (unchecked), and "ORDER BY COLUMN" (unchecked). To the right of these options is a preview of a document page with a header "H" and a bar chart, with the text "8.5 BY 11 INCHES" below it. Below the preview is a "PRINT QUALITY" section with radio buttons for "BEST QUALITY" (selected), "600 DPI", and "CUSTOM", and a checkbox for "ECONOMODE (SAVE TONER)". A "DETAILS..." button is next to the "CUSTOM" option. At the bottom of the dialog are four buttons: "OK", "CANCEL", "APPLY", and "HELP".

24

26

28

22

Fig. 5

The dialog box is titled "PRINTER POP-UP". It contains several buttons for preset printing options: "MEMO - SINGLE SIDED", "STAPLED BOOK TWO-SIDED", "BOOKLET", "MEMO - TWO SIDED", "TWO-UP TABLET", and "NUMBER OF COPIES" (with a spinner box showing "1"). At the bottom are three buttons: "ADVANCED", "OK", and "CANCEL". Below these buttons is a checkbox labeled "DO NOT SHOW THIS DIALOG AGAIN".

34

36

Fig. 4

